



morning
industry, inc.

INSTALLATION SHEET

QKK Lock Sets

A Back Module

B Back Module Battery Cover
(screw included but not shown)

C Front Assembly
(batteries not included)

D Door Latch

E Back Mounting Plate
(4 screws included)


F Screw Driver

G Remote Controller



Step 1

Press & slide Adjustable Center Piece to required backset. (See above settings).

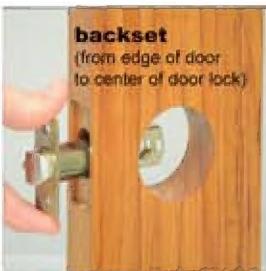

Step 2

Install latch into the side of door.



Step 3

Mount Front Assembly on door, routing wire loom UNDER latch and assuring Square Tube is face up.



Step 4

Install Back Mounting Plate (arrow showing) & route wire loom through rectangular hole.



Step 5

Connect wire loom from Front Assembly to Back Module.



Step 6

Fasten Back Module to the Back Mounting Plate. DO NOT OVERTIGHTEN. Install premium alkaline batteries.



Step 7

Fasten Battery Cover to Back Module.

